

22. INDEX

Air Cleaner	3-5	Evaporative Emission Control Systems	
Case	4-16	(California model only)	3-11
Air Injection Control Valve Inspection		Final Drive	12-1
(California model)	4-20	Gear	12-5
Vent Control Valve Inspection		Oil	2-11
(California model)	4-21	Removal	12-3
Alternator	8-1	Float Chamber	4-6
Automatic Fuel Valve	4-7	Flywheel Installation	8-3
Battery/Charging System	16-1	Removal	8-2
Battery	3-12, 16-3	Fork	13-14
Bearing Selection	10-9	Front Wheel/Suspension	13-13
Installation	10-10	Wheel	13-7
Brake Calipers	15-9	Fuel System	4-1
Fluid	3-13	Lines	3-4
Replacement/Air Bleeding	15-3	Tank	4-17
Brake Light Switch	3-14, 19-7	Gear Tooth Contact Pattern Check	11-14
Pad/Disc	15-4	Gearshift Linkage	7-20
Shoe/Pad Wear	3-13	General Information	1-1
System	3-13	Safety	1-1
Cable & Harness Routing	1-9	Handlebar	13-3
Camshaft Installation	9-15	Switches	19-9
Removal	9-3	Headlight	19-3
Carburetor Assembly	4-10	Aim	3-15
Choke	3-5	High Altitude Adjustment (U.S.A. only)	4-15
Installation	4-13	Hydraulic Brakes	15-1
Removal	4-3	Ignition System	17-1
Separation	4-8	Coil	17-4
Synchronization	3-9	Switch	19-4
Carburetor-idle Speed	3-10	Timing	17-5
Charging System	16-4	Instruments	19-6
Clutch System/Gearshift Linkage	7-1	Lights/Switches/Instruments	19-1
Clutch	7-14	Lubrication	2-1
Diode	18-4	Points	2-12
Fluid	3-15	Maintenance	3-1
Fluid Replacement/Air Bleeding	7-4	Schedule	3-3
Master Cylinder	7-5	Master Cylinder	15-7
Slave Cylinder	7-8	Model Identification	1-2
Switch	19-9	Neutral Switches	19-8
Connecting Rod Removal	10-4	Nuts, Bolts, Fasteners	3-17
Control Cable Lubrication	2-12	Oil Pressure Check	2-4
Coolant Replacement	6-2	Switch	19-7
Cooling System	6-1	Oil Pump	2-7
Hoses & Connections	3-10	Strainer Cleaning	2-5
Countershaft Inspection	11-10	Output Driven Gear	11-10
Crankcase/Crankshaft/Piston	10-1	Pilot Screw	4-13
Crankcase Assembly	10-13	Piston And Rod Installation	10-11
Disassembly	10-3	Removal	10-5
Crankshaft Removal	10-7	Pressure Relief Valve	2-6
Cylinder Heads/Valves	9-1	Pulse Generators	17-5
Compression	3-12	Purge Control Valve Inspection	
Cylinder Head Assembly	9-12	(California model)	4-19
Disassembly	9-7	Radiator Coolant	3-10
Installation	9-13	Radiator/Cooling Fan	6-5
Removal	9-5	Rear Wheel/Suspension/Brakes	14-1
Drive Shaft	12-3	Brake	14-8
Electric Starter	18-1	Wheel	14-3
Emission Control System	1-13	Right Crankcase Cover Installation	7-20
Engine Removal/Installation	5-1	Removal	7-10
Installation	5-5	Secondary Air Supply System	
Engine Oil & Filter Change	2-3	(California model only)	3-10
Level	2-3	System(California model)	4-18
Engine Removal	5-3		

INDEX

Service Information			
Alternator	8-1	Transmission	11-2
Battery/Charging System	16-1	Vacuum Chamber	4-4
Clutch System/Gearshift Linkage	7-2	Valve Clearance	3-6
Cooling System	6-1	Guide Replacement	9-10
Crankcase/Crankshaft/Piston	10-1	Seat Inspection/Refacing	9-11
Cylinder Heads/Valves	9-1	Water Pump	6-8
Electric Starter	18-1	Wiring Diagram	20-1
Engine Removal/Installation	5-2		
Final Drive	12-1		
Front Wheel/Suspension	13-1		
Fuel System	4-1		
Hydraulic Brakes	15-1		
Ignition System	17-1		
Lights/Switches/Instruments	19-1		
Lubrication	2-1		
Maintenance	3-1		
Rear Wheel/Suspension/Brakes	14-1		
Transmission	11-1		
Service Rules	1-1		
Shift Fork And Shift Drum	11-16		
Shock Absorber	14-11		
Side Stand	3-15		
Spark Plugs	3-6		
Unit Inspection	17-3		
Specifications	1-3		
Starter Clutch	7-11		
Motor	18-2		
Relay Switch	18-4		
Stator Replacement	8-2		
Steering Head Bearing Adjustment	13-25		
Bearings	3-17		
Steering Stem	13-21		
Suspension	3-15		
Swingarm	14-13		
System Testing	6-2		
Tachometer	19-11		
Tail Light Bulb/License Bulb Replacement	19-12		
Temperature Sensor	19-11		
Thermostat	6-3		
Thermostatic Switch	19-10		
Throttle Operation	3-4		
Tires/Wheels	3-16		
Tools	1-7		
Torque Values	1-5		
Transmission	11-1, 11-3		
Assembly	11-18		
Troubleshooting			
Battery/Charging System	16-2		
Clutch System/Gearshift Linkage	7-3		
Cooling System	6-1		
Crankcase/Crankshaft/Piston	10-2		
Cylinder Heads/Valves	9-2		
Electric Starter	18-1		
Final Drive	12-2		
Front Wheel/Suspension	13-2		
Fuel System	4-2		
Hydraulic Brakes	15-2		
Ignition System	17-2		
Lights/Switches/Instruments	19-2		
Lubrication	2-2		
Rear Wheel/Suspension/Brakes	14-2		